


REMOTE CONTROL

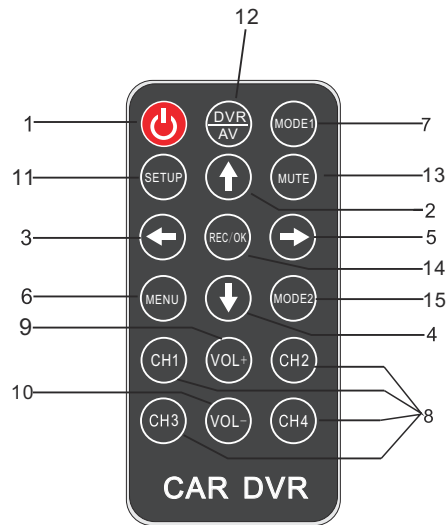

1. Power
2. Up
3. Function decrease
4. Down
5. Function increase
6. MENU
7. Split image switch
8. Each channel alone amplification
9. VOL+
10. VOL-
11. SETUP
12. DVR/AV
13. MUTE
14. REC/OK
15. Folder

PACKAGING LIST

SN	NAMES	QUANTITY
1	Host	1
2	User's Manual	1
3	Power Cable	1
4	Sun shade	1
5	Screw	4
6	U-bracket	1
7	SD Card(Optional)	1

10.1" QUAD DVR MONITOR



Before operating the Monitor, please read this manual thoroughly and retain it for future reference.


10. 1" digital quad monitor DVR

SPECIFICATIONS


10. 1" digital quad monitor with DVR

- * resolution : 1024 x RGB x 600
- * brightness : 300 cd/m²
- * new TFT panel , 16 : 9 image
- * 4 ways Camera input, 1way DVR
- * Single /Split /Quad view selectable
- * OSD menu, remote control
- * PAL/NTSC adjustable
- * 4 ways Trig function
- * Trigger priority: CAM 2>CAM 1>CAM 3>CAM 4
- * Built-in DVR function, Support 64G flash, Built-in speaker
- * view angle: L/R: 70, UP: 50, down: 70 degree
- * Power requirement: DC 9~32 V
- * detachable sunshade
- * Metal U type bracket
- * dimension: 18.5 x 12.8 x 3.0cm (without shade)
20.4 x 14.1 x 7.8cm (with shade)


CONNECTION

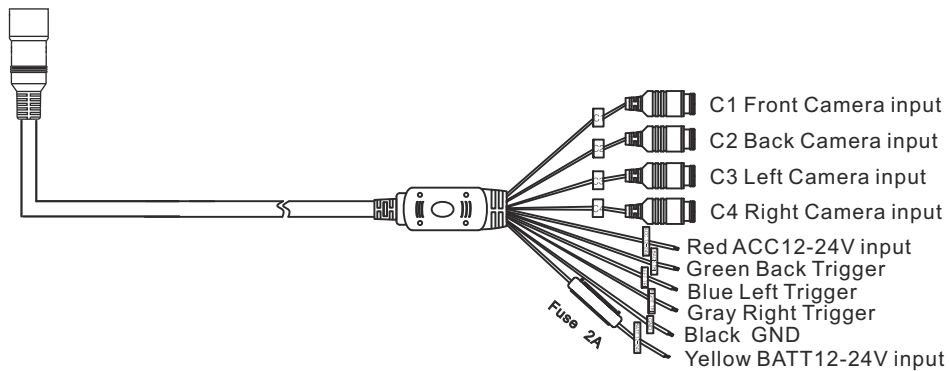

MONITOR SPARE PARTS

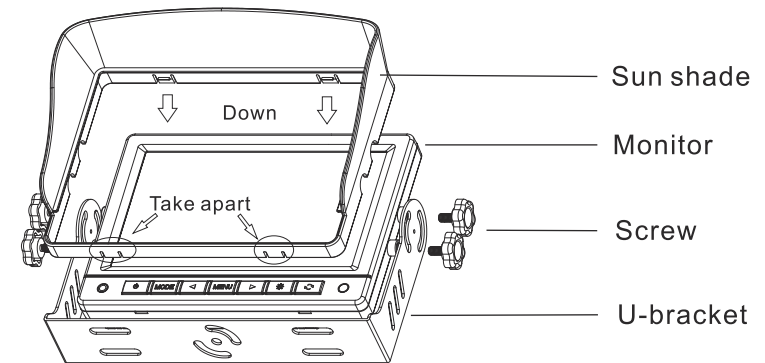

MONITOR

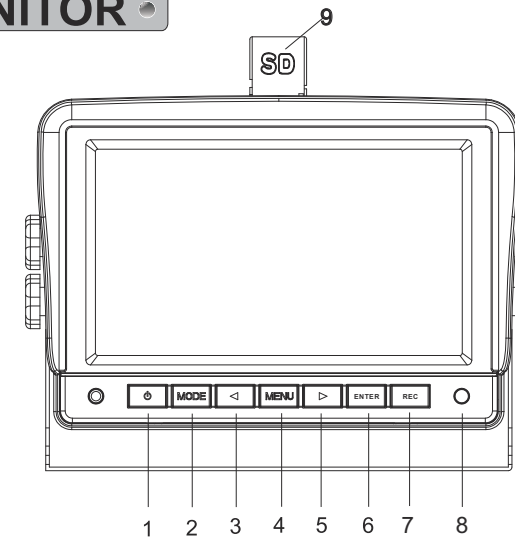

1. Power
2. Press DVR / AV / Split mode
3. Increase setting
4. Menu
5. Decrease setting
6. Folder
7. REC & Play
8. Remote window
9. DVR SD Card