 


REMOTE CONTROL

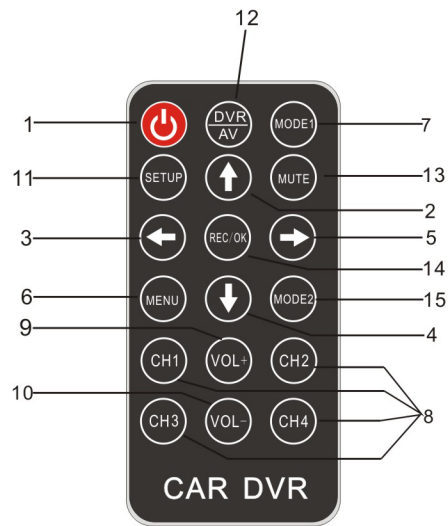

1. Power
2. Up
3. Function decrease
4. Down
5. Function increase
6. MENU
7. Split image switch
8. Each channel alone amplification
9. VOL+
10. VOL-
11. SETUP
12. DVR/AV
13. MUTE
14. REC/OK
15. Folder

PACKAGING LIST

SN	NAMES	QUANTITY
1	Host	1
2	User's Manual	1
3	Power Cable	1
4	Sun shade	1
5	Screw	4
6	U-bracket	1
7	SD Card(Optional)	1

7" QUAD DVR MONITOR



Before operating the Monitor, please read this manual thoroughly and retain it for future reference.

 
7" digital quad monitor DVR

SPECIFICATIONS


7" digital quad monitor with DVR

- * resolution : 1024 x RGB x 600
- * brightness : 350 cd/m2
- * new TFT panel , 16 : 9 image
- * 4 ways Camera input, 1way DVR
- * Single /Split /Quad view selectable
- * OSD menu, remote control
- * PAL/NTSC adjustable
- * 4 ways Trig function
- * Trigger priority: CAM 2>CAM 1>CAM 3>CAM 4
- * Built-in DVR function, Support 64G flash, Built-in speaker
- * view angle: L/R: 70, UP: 50, down: 70 degree
- * Power requirement: DC 9~32 V
- * detachable sunshade
- * Metal U type bracket
- * dimension: 18.5 x 12.8 x 3.0cm (without shade)
20.4 x 14.1 x 7.8cm (with shade)


CONNECTION

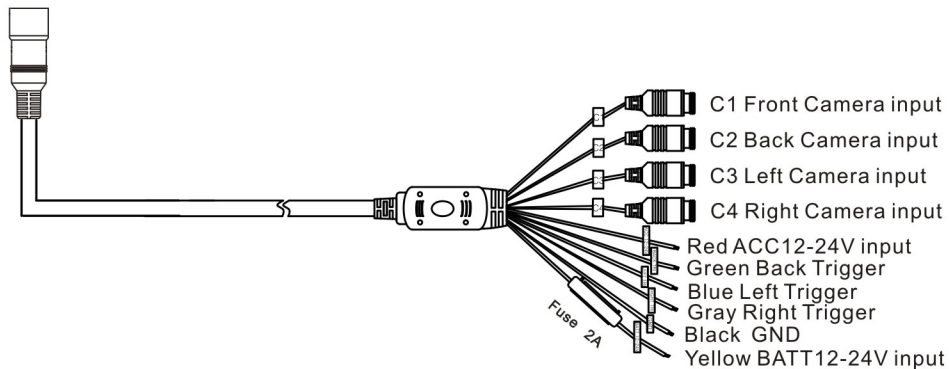

MONITOR SPARE PARTS

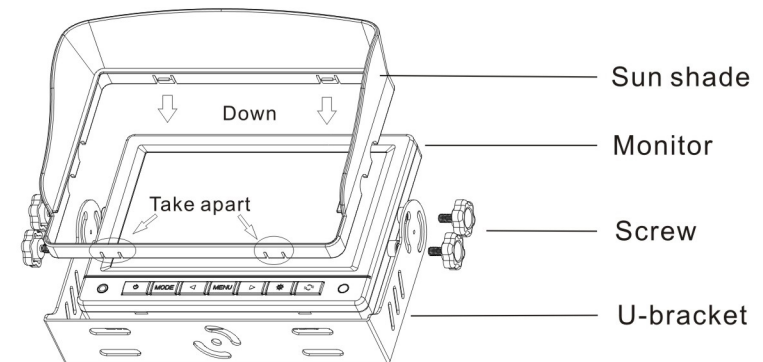 

MONITOR

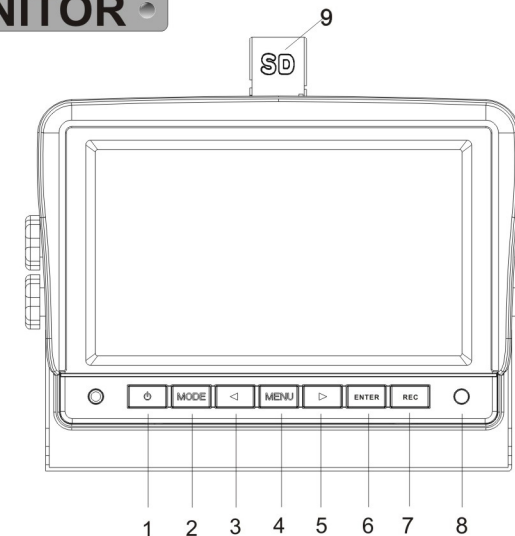 

1. Power
2. Press DVR / AV / Split mode
3. Increase setting
4. Menu
5. Decrease setting
6. Folder
7. REC & Play
8. Remote window
9. DVR SD Card