


UNİVERSAL - BEDSLIDE

KOD / CODE :

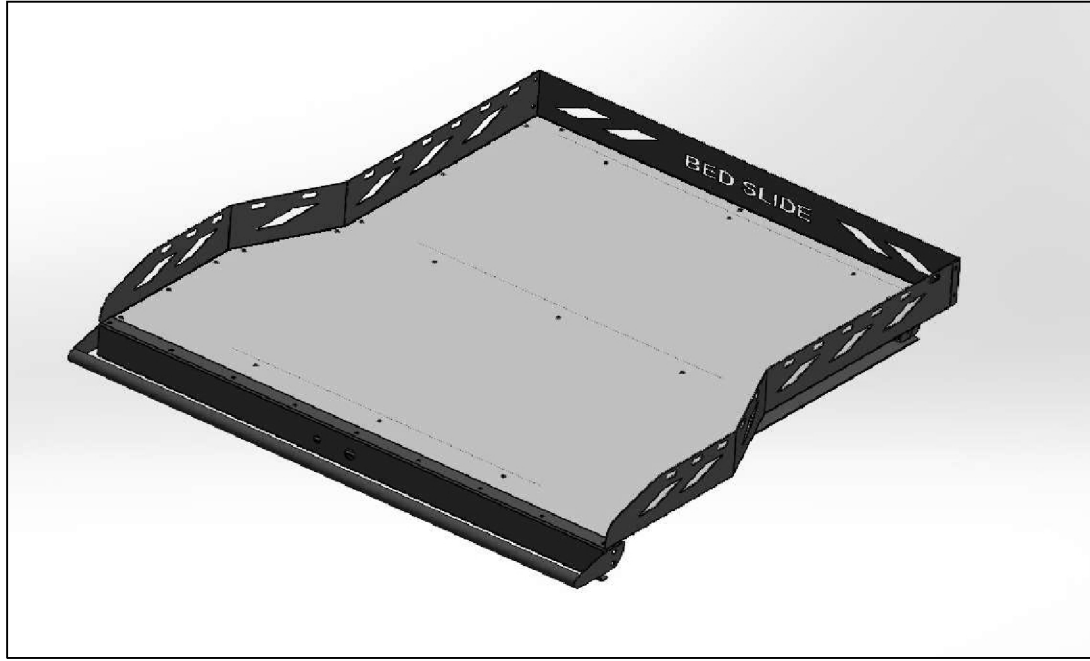

MONTAJ SETİ INSTALLATION SET

M8x60 BOLT



PCS : 4

①

M8 NUT



PCS : 4

②


M8 VASHER



PCS : 4


③

SPECIAL WASHER




PCS : 4

④

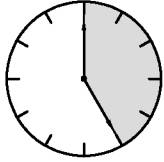

25 MINUTES

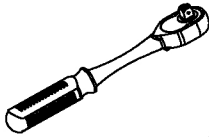


SW15 (30Nm)




SW13 (20Nm)


SW13 (20Nm)

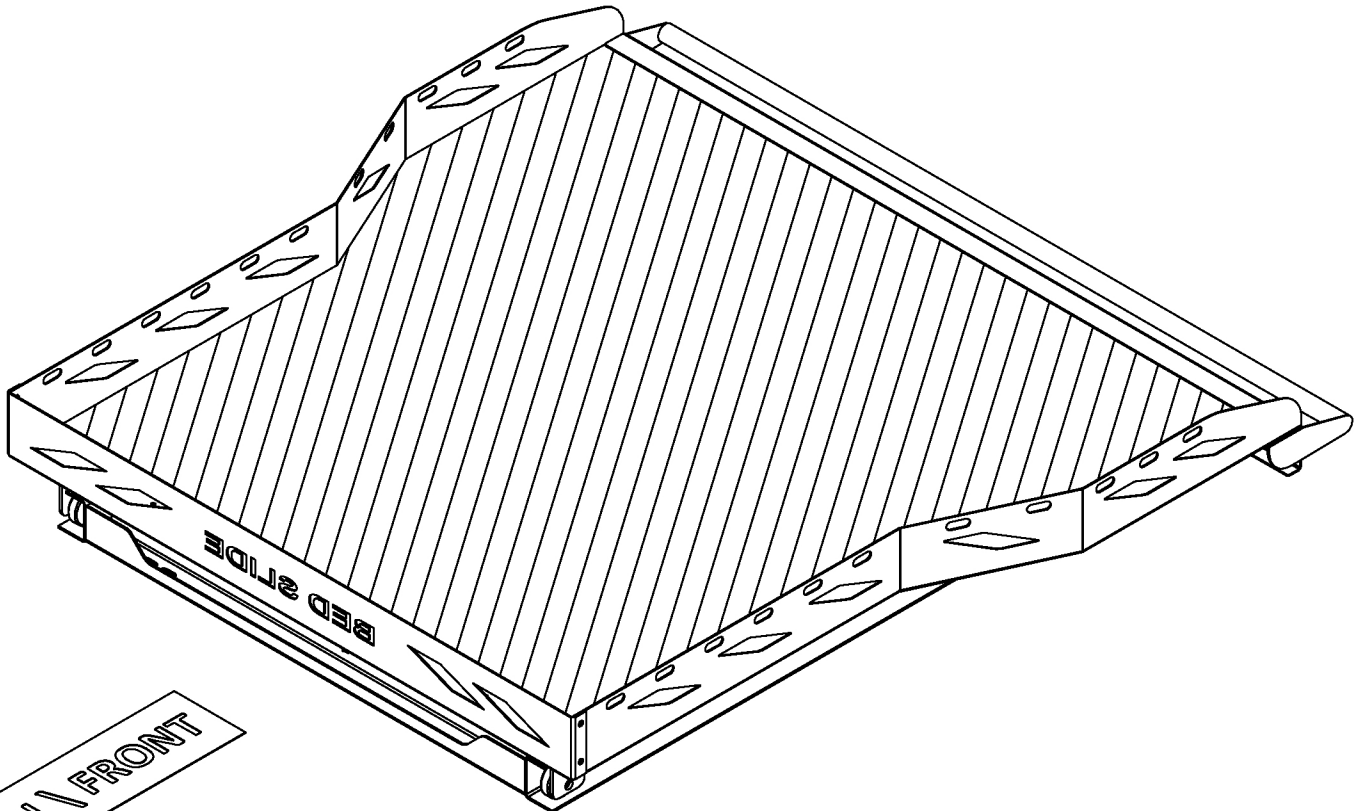

MONTAJ ŞEMASI / MOUNTING DIAGRAM

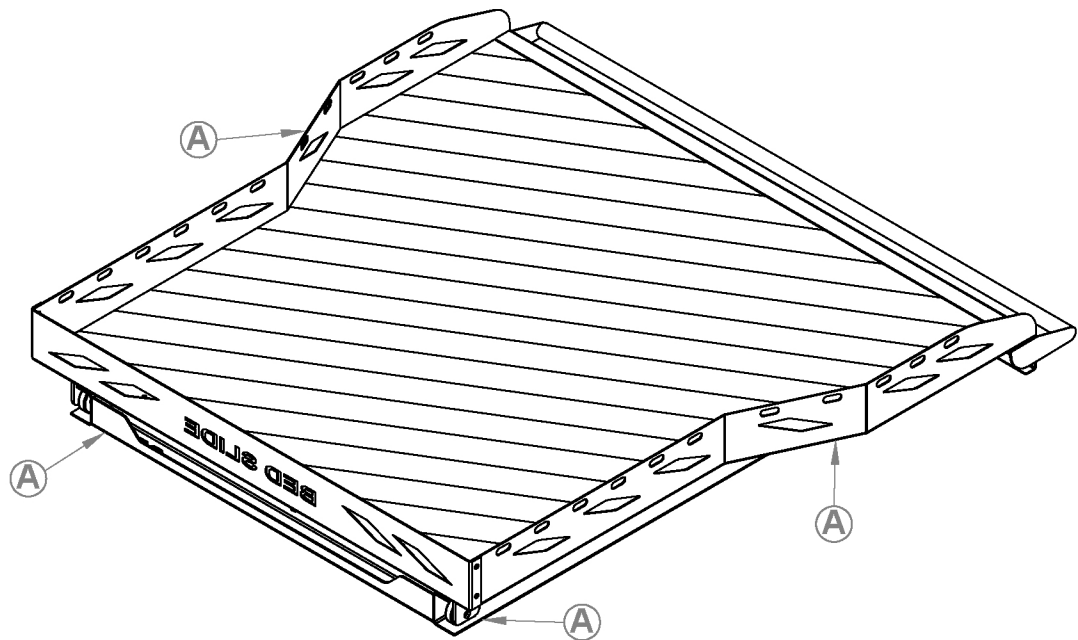


*** PLACE THE VEHICLE BODY IN THE CENTER OF THE CHASSIS IN THE CLOSED POSITION.**

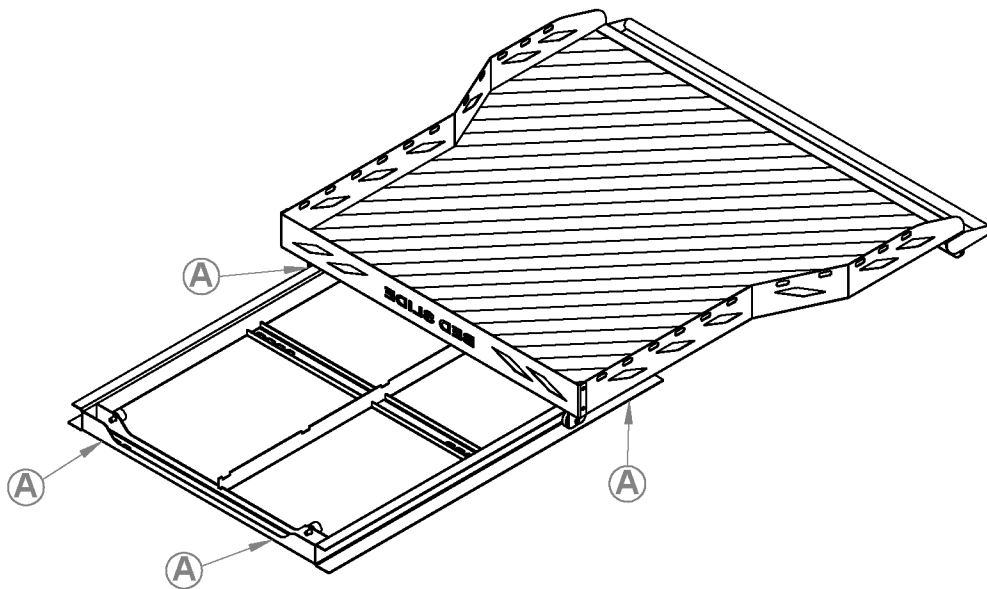

*** MARK THE VEHICLE BODY AT THE AREAS INDICATED BY "A".**

*** DRILL THE MARKED AREAS WITH A 9 MM DRILL.**

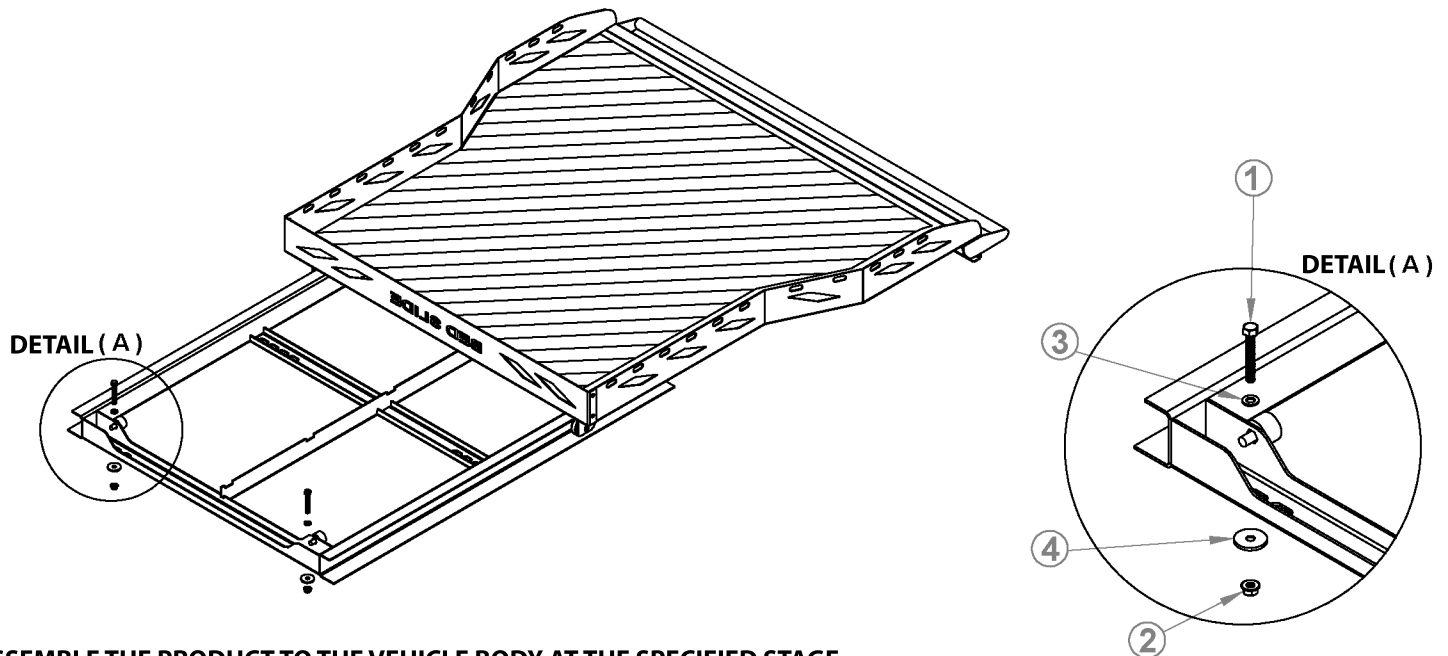

*** ASSEMBLE THE PRODUCT TO THE VEHICLE BODY AT THE SPECIFIED STAGE.**